



TOPPER PART N° C7/2

INSTRUCTIONS FOR FITTING THE WEBBING KICKING STRAP TO THE TOPPER LOWER MAST

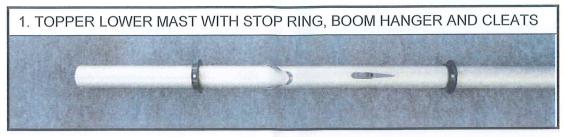

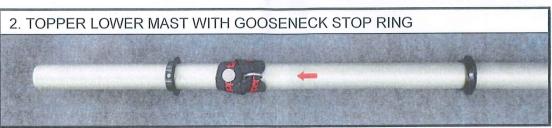

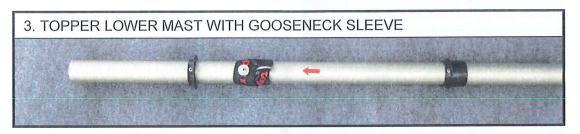

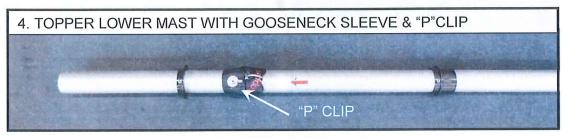





TO CHANGE THE WEBBING STROP


HOLD THE LOWER MAST SECURELY!

THEN DRILL OUT THE RIVETS THAT SECURE THE STOP RING AND WEBBING STROP.


REMOVE THEM FROM THE MAST.

Ø4.0mm FOR THE STOP RING

Ø5.0mm FOR THE WEBBING STROP

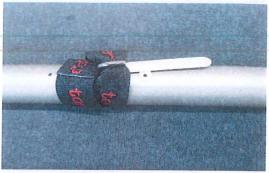



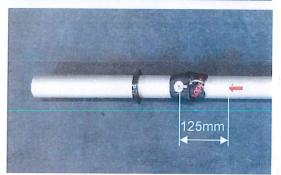

ATTACH THE PLASTIC WASHER OVER THE CENTRE OF THE RIVET HOLE WITH THE STICKY PAD.

CAREFULLY SLIDE THE NEW STROP UP OVER THE PLASTIC WASHER.

TIP

USE A LOLLY STICK OR SIMILAR TO EASE THE WEBBING OVER THE WASHER.

NOTE THE POSITION OF THE RING.

LINE UP THE HOLES IN THE WEBBING AND THE MAST AND RIVET THE WHOLE ASSEMBLY IN PLACE. Ø5.0mm X 19 Lg

NOTE THE POSITION OF THE "P" CLIP

REPLACE THE LOWER STOP RING AND RIVET IT IN PLACE

ATTACH THE RED LOCATION ARROW IN THE POSITION SHOWN

REPLACING THE METAL BOOM HANGER WITH A WEBBING STROP


DRILL OUT THE RIVETS SECURING THE BOOM HANGER AND LOWER STOP RING, AND REMOVE THEM FROM THE MAST

ON THE CENTRE LINE OF THE MAST, MARK THE POSITION OF THE RIVET HOLE REQUIRED FOR FITTING THE WEBBING STROP

CENTRE PUNCH THE MARK AND DRILL THROUGH Ø5.0mm

ATTACH THE WEBBING STROP AND THE LOWER STOP RING AS DESCRIBED ABOVE

PLUG THE REDUNDANT BOOM HANGER HOLES WITH THE RIVETS PROVIDED

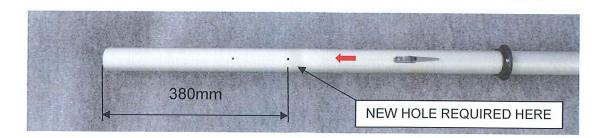

FOR FURTHER ADVICE AND ALL TECHNICAL ENQUIRIES CONTACT Topper International Ltd TEL +44(0)1233 629186 email info@toppersailboats.com